

THIS PAGE IS FOR CONSULTATION PURPOSES ONLY

CLICK ON ONE OF THE FILES BELOW AND THE SOFTWARE WILL DISPLAY THE VERBATIM TO FOLLOW TO PERFORM EACH OF THE STEPS

THE PREDICTION OF THE EXPECTED COMPUTATION TIME OF EACH STEP IS QUANTIFIED IN PARENTHESES

Sommaire

1- Display of tutorial options to be selected on the home page of the software.	2
2- Install a new project or choose a completed project from the software list.(Negligible).....	3
3- (STEPS) from the list of steps displayed, check the steps that will form the project. (Negligible).....	4
4-(FOUNDATION) Enter foundation measurements (Negligible) + section adjustments (+/-5 minutes).....	5
5-(BASEMENT) Basement products Display (Snapshot) + Section Adjustments (+/- 5 minutes)	6
6-(FLOORS) Displaying products at each stage of the project (Snapshot) + section adjustments (+/- 10 minutes) ...	7
7-(GARAGE) Record the measurements of the garage. (Negligible) + Section adjustments (+/- 5 minutes).....	8
8.1-(INTERIOR ROOM) Add a new room (Negligible)	9
8.2- (INTERIOR ROOM) Dress up this piece using the sections below. (+/- 5 minutes) each	10
9.1-(ROOF) Record the measurements of each identical roofing panel. (Negligible)	11
9.2-(ROOF) Adjust these panels if necessary using the sections below (+/- 5 minutes) each.....	12
10-(BALCONY) Write down the measurements of the balcony (Negligible) + Section adjustments (+/- 5 minutes) 13	
11-(TERRACE) Record the measurements of the terrace basement. (Negligible)+ Section adjustments (+/-5 minutes)	14
12-(ADJUSTMENTS) Set up a field and manage the administration of the project (+/- 10 minutes).....	15

1- Display of tutorial options to be selected on the home page of the software.

THIS PAGE IS A FAITHFUL REPRESENTATION OF THE HOMEPAGE OF THE SOFTWARE.

Click on the “Projects” scroll bar to select a project from the file list.

- *ACCESS:*

Click on the “ACCESS” tab to display the desired project.

- *ADD:*

Click on the “ADD” tab to add a new project. Fill in the project identification form by validating it to display it in the “Projects” tab.

- *COPY:*

Click on the “COPY” tab to repeat this project on the same site and rename it. A “REMOVE” bookmark eliminates the project appearing on the project tab.

- *DATASHEET:*

Clicking on the “DATASHEET” tab gives access to the choices of the price list available for each project.

Datasheet

- *COMMAND ORDERS:*

Clicking on the “COMMAND ORDER” tab gives access to the management of purchase orders and suppliers.

- *RESULTS:*

Click on the “RESULTS” to access the following reports (Steps Detailed - Detailed Products – *Products Compiled - Banks*) of the project

- *KNOWLEDGE BASE :(VIDEO)*

Click on the icon at the top of the page representing a white question mark in a black circle to access the various videos (66) teaching how to install a multitude of product

- *EDIT THE PROJECT:*

Click on the icon representing a mechanical key and complete this form to edit the project.

2- Install a new project or choose a completed project from the software list.(Negligible)

THIS PAGE ALLOWS YOU TO VIEW AN EXISTING PROJECT OR INSTALL A NEW ONE

From the home page on the screen, click **ADD** to get a new project

A table appears or you need to name the project

A green board appears on the screen confirming that you have saved the project. This green board should always appear after completing each box in the software.

Name

Type

Datasheet

CLICK ON SAVE

A green board appears on the screen confirming that you have saved the project. This green board should always appear after completing each box in the software.

The new project you have saved will be displayed in the list of projects. Click the project drop-down arrow and target the project in the list of projects. Click on the project you want to use and then click on the **ACCESS** cell to display it on the screen.

To access an existing project from the list, click on the drop-down arrow of projects and choose the project you want. Click on this project and then click **ACCESS** to display it on the screen.

3- (STEPS) from the list of steps displayed, check the steps that will form the project. (Negligible)

CHECK BELOW THE STEPS THAT WILL FORM THE PROJECT.

- Adjustments**
- Foundation**
- Basement**
- Basement Wall**
- Concrete Balcony**
- Garage**
- Basement Patio**
- 1st Floor**
- 2nd Floor**
- 3rd Floor**
- 4th Floor**
- 5th Floor**
- 6th Floor**
- Roof**
- Inner Room**

CLICK ON SAVE

THE ADJUSTMENTS STEP SHOULD ALWAYS BE CHECKED

The software shows the steps you've selected at the top of the screen and hides the ones you don't use.

You can now start your project

4-(FOUNDATION) Enter foundation measurements (Negligible) + section adjustments (+/-5 minutes)

ENTER THE LARGEST WIDTH AND LENGTH (INCLUDING ADJUSTMENTS) OF THE FOUNDATIONS AND THE SOFTWARE WILL ACTIVATE ALL QUERIES IN THE PROJECT.

Starting Measures

Floor Facade

40.000	Foot
--------	------

Floor Side

40.000	Foot
--------	------

[Angular surface](#)

[Modify Perimeter of Foundations \(to repeat\)](#)

[Length of walls to add or remove from the original perimeter of the building.](#)

CLICK ON SAVE

Use the files below to modify the foundations, to add windows to the foundation, to change the thickness of the foundation and the insulation of the walls, to add interior jogs, and pilasses etc.

[Basic Foundations](#)

[Concrete](#)

[Solage](#)

[Opening of Foundations](#)

[Concrete Columns](#)

[Interior Solage](#)

[Exterior Solage](#)

[Curbstone](#)

[Antifreeze](#)

5-(BASEMENT) Basement products Display (Snapshot) + Section Adjustments (+/- 5 minutes)

IF NECESSARY, OPEN THE SECTIONS BELOW TO COMPLETE THE FLOOR

.. Use the files below as needed to add partitions, load walls, concrete blocks, etc.

THE MEASURES FROM THE " FOUNDATION " STEP ARE ALREADY INCLUDED BY DEFAULT ON THE BASEMENT FLOOR AND CEILING.

Ceiling

Wood Partition

Bearing Wall

Wall Height

Concrete Blocks

Mechanical

ALL THE BASIC PRODUCTS OF THE SUBSOIL COME DIRECTLY FROM THE RESULT OF THE FOUNDATION MEASUREMENTS

6-(FLOORS) Displaying products at each stage of the project (Snapshot) + section adjustments (+/- 10 minutes)

If the floor measurements have changed, use the following boxes to change them.

Choice of Dimensions

(1st) Already Programmed Dimension

(2nd) New Dimensions

ADD.

Use the files below as needed to add partitions, load walls, concrete blocks, windows, etc.

[Base Floor](#)

[Exterior Wall](#)

[Floor](#)

[Ceiling](#)

[Partition](#)

[Bearing Wall](#)

[Concrete's Block](#)

[Concrete Wall](#)

[Common Wall](#)

[Coating NO.1](#)

[Coating NO.2](#)

[Coating NO.3](#)

[Iron Angle & Accessories](#)

[Sills](#)

[Mechanical](#)

[Louver](#)

ALL THE CORE PRODUCTS OF THE UPPER FLOORS OF THE PROJECT COME DIRECTLY FROM THE RESULT OF THE FOUNDATION MEASUREMENTS.

By default, floors display the products of the floors, ceilings, and walls on each floor.

7-(GARAGE) Record the measurements of the garage. (Negligible) + Section adjustments (+/- 5 minutes)

Enter the length and width of the garage and the software will activate the queries

Dimension

Garage Length

Garage Width

Square Surface (to repeat)

SAVE

Use the files below to add partitions, load walls, concrete blocks, etc.

Solage

Interior Solage

Bearing Wall

Wall Concrete Blocks

Coating NO.1

Exterior Solage

Floor

Ceiling

Exterior Wall

ALL BASIC PRODUCTS FOR THE BASEMENT, FLOOR, CEILING AND EXTERIOR WALLS OF THE GARAGE ARE DISPLAYED BY DEFAULT FROM THE INSTALLATION RESULT OF THE TWO GARAGE MEASUREMENTS.

8.1-(INTERIOR ROOM) Add a new room (Negligible)

Room Dimension

Width

0.000	Foot
-------	------

Length

0.000	Foot
-------	------

[Adjust Surface \(to repeat\)](#)

[Triangular Surface \(to repeat\)](#)

Identify the project.

Confirmation

Type of Building

TEXT	Unit
------	------

Identification of Room.

Room Name

TEXT	Unit
------	------

SAVE

Stage Selection

- (1st) No Floor
- (2nd Choice) Basement
- (3rd Choice) 1st Floor
- (4th Choice) 2nd Floor
- (5th Choice) 3rd Floor
- (6th Choice) 4th Floor
- (7th Choice) 5th Floor
- (8th Choice) 6th Floor
- (9th Choice) Garage

8.2- (INTERIOR ROOM) Dress up this piece using the sections below. (+/- 5 minutes) each

To complete the products and dress up the pieces, use the sections below while following the instructions in the comments.

Products

Mechanical

Wardrobe

2nd Wardrobe

Wall Openings

Plastering

Inside Doors

Doors & Windows

Interior Stair

Kitchen

Bathroom

Floor Balcony

Wood Partition

Metal Partition

Ventilation

**9.1-(ROOF) Record the measurements of each identical roofing panel.
(Negligible)**

Identify the number and type of identical panels used.

Identical Panels

Quantity

Unit

- (1s) None
- (2nd) Four Square Angles
- (3rd) Two Square Angles
- (4th) One Square Angle or Less

SAVE

Enter the dimensions of the panels.

Panel Measurements

Top of Panels

Foot

Bottom of Panels

Foot

Height

Foot

Slope

Unit

SAVE

9.2-(ROOF) Adjust these panels if necessary using the sections below (+/- 5 minutes) each

Choosing the thickness of the cornices

Cornice Columbine

2 " X 4 " x 12 '

Unit

2 " X 6 " x 12 '

Unit

2 " X 8 " x 12 '

Unit

2 " X 10 " x 12 '

SOFFITE

LOCALISATION SOFFITE

BAS DES PANNEAUX

Inch

CORNICHES DE PIGNON

Inch

Use the files below to add different products to the roof, etc.

[_Roof Products](#)

[_Roof Pinion](#)

[_Carport](#)

[_Common Roof](#)

[_Chimney](#)

[_Ventilation](#)

[_Flat Roof with Trust](#)

[_Balcony](#)

10-(BALCONY) Write down the measurements of the balcony (Negligible) + Section adjustments (+/- 5 minutes)

Enter the length and width of the balcony and the software will calculate and compile all the products of the slab, slab reinforcement etc.

Square Surface (to repeat)

ACCESSADDREMOVE

Length

Width

[Square Surface Adjustment \(to repeat\)](#)

To complete the products and construction of the balcony, use the sections below, while following the instructions in the comments.

[THE RESULT OF THE `` SLAB SIZE '' CALCULATION SHOWS THE DIMENSION OF THE CONCRETE BALCONY BY DEFAULT.](#)

[_2nd Balcony](#)

[_Balcony Standard](#)

[_Balcony Solage](#)

[_Slab Support](#)

[_Balcony Column](#)

[_Balcony Ramp](#)

[_Cold Room](#)

**11-(TERRACE) Record the measurements of the terrace basement.
(Negligible)+ Section adjustments (+/-5 minutes)**

Enter the length and width of the deck and the software will calculate and compile all the products of the flooring, flooring and deck reinforcement etc.

Number of Terrace

Quantity of Terrace

Unit

House wall Length

0.000 Foot

Side of the slab

0.000 Foot

[Surface Modification \(to repeat\)](#)

SAVE

To complete the products and construction of the terrace, use the sections below, while following the instructions in the comments

[Terrace Standard](#)

[Wall Protection Antifreeze](#)

[Terrace](#)

[2nd Terrace](#)

[Wall on Foundation](#)

[Ceiling](#)

[Extra Product](#)

12-(ADJUSTMENTS) Set up a field and manage the administration of the project (+/- 10 minutes).

THIS STEP CONTAINS THE OPTIONS TO COMPLETE THE SPECIFICITIES OF THE PROJECT ON THE SELECTED LAND.

THIS STEP CONTAINS THE OPTIONS TO COMPLETE THE SPECIFICITIES OF THE PROJECT ON THE SELECTED LAND.

_Land Details

_Excavation

_Municipal Service

_Professional and other Services

_Landscaping

_Structure

Floor

Walls

Installation of products on external walls.

Ceiling

Roof

_Submission

